



OWNER'S GUIDE

Engineered to deliver bold, vibrant sound, the Sonosphear's classic design, powerful dual 8 Watt driver performance, and state-of-the-art Bluetooth technology will enhance your musical experience into something unforgettable.

GET READY TO EXPERIENCE
THE ART OF SOUND.

CONTROL BUTTONS

POWER BUTTON

- Press 3 seconds: Power on
- Press 3 seconds when unit is on: Power off
- Controlling the rear LED ring light modes:
 - 1st short press: brightest
 - 2nd short press: less bright
 - 3rd short press: least bright
 - 4th short press: LED ring turns off

PLAY/PAUSE BUTTON:

- While playing music, short press to pause/play music
- To accept a call: Short press
- To reject a call: Long press
- In Bluetooth Mode: Press twice to dial the last phone number
- In Aux Mode: Short press to mute

M (MODE) BUTTON

Short press to switch between Bluetooth and Aux model

VOLUME -

- Volume down:
 - Long press for 3 seconds
- Track back:
 - Short press for 1 second

VOLUME +

- Volume up: Long press for 3 seconds
- Track forward: Short press for 1 second

AUX MODE: Track forward/track back and play/pause functions not available in AUX Mode

POWER INDICATOR LIGHTS

INDICATOR LIGHTS

(Top front center of grill)

Power on: Solid Blue

Pairing: Fast blue flashing light

Paired: Slow blue flashing light

CHARGING LED

(On the bottom of rear)

Charging mode: Red LED

Charging complete: LED is off

LED RING

Controlling the rear LED ring light modes with the Power Button:

1st short press: brightest

2nd short press: less bright

3rd short press: least bright

4th short press: LED ring turns off

SONOSPHEAR SPECIFICATIONS:

- Bluetooth V4.0
- Transducer: 2x52mm
- Speaker Driver: 2x8W / Size: 2.16in
- Frequency response: 100-20KHz
- Battery Type: Lithium 7.4V 2600mAh
- Battery Charge time: Approximately 3 hours at 5V/1A input
- Music Playtime: Up to 8 hours

INCLUDED IN THIS BOX:

- Sonosphear Bluetooth Speaker
- 1 Micro USB Charging Cable
- 3.5 mm Auxiliary Cable

GENERAL SAFETY POINTERS:

- Be sure to fully charge your Sonosphear before its first use. Use the charging micro USB included in the package to bring your Sonosphear to life.
- Place your Sonosphear on a level surface away from direct sunlight or excessive heat.
- Be sure to remove the plastic film on the Sonosphear's foot stand before first use to help grip the surface.
- Do not attempt to modify, dismantle or repair your Sonosphear. Let's avoid unnecessary fires and/or electric shocks!
- As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.

RESETTING THE SPEAKER:

A reset returns the Sonosphear to its to original factory settings.

- To reset the Sonosphear, turn the speaker upsidedown.
- Place a small pointed object inside the 3.5mm audio input and press firmly.

CHARGING THE SONOSPHEAR:

1. Connect the micro USB plug to the micro USB charging port on the bottom of the Sonosphear.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device.
3. A red light near the charging port on the Sonosphear will glow to indicate that the Sonosphear is charging, and the red light will disappear when it is fully charged.

TURNING ON/OFF:

- To turn the Sonosphear on, press and hold the power button for about 3 seconds and you will hear a 4-beep jingle indicating it is on. The LED light on the front top of the Sonosphear will show blue.
- Note: The blue LED light will appear differently depending on whether you are manually connecting a device to your Sonosphear with the 3.5mm headphone jack, or if you choose to connect via Bluetooth. If you have no devices plugged into the 3.5 mm headphone jack when you turn it on, the Sonosphear will say "Bluetooth Mode" and the blue LED light will flash until you have paired your Bluetooth device. If you have a 3.5 mm auxiliary cord plugged into your Sonosphear when you turn it on, the LED light will appear a solid blue and you're all set to go.
- To turn the Sonosphear off, press and hold the power button for about 3 seconds. You will hear another 4-beep jingle indicating it has successfully powered off.

USING BLUETOOTH: PAIRING YOUR DEVICE

1. Press and hold the Power button until you hear a 4-beep jingle. The blue LED light on the front of the Sonosphear will flash blue indicating the Sonosphear is in pairing mode. And you will hear "Bluetooth Mode" said aloud.
2. Make sure your Bluetooth settings are switched to the "On" position on your smart phone/laptop/other Bluetooth device.
3. Check the Bluetooth Devices list on your smart phone/laptop/other Bluetooth device and select "Sonosphear" from the list to connect.
4. The LED light will then show a solid blue light to indicate a successful pair.
5. Select a favorite jam of yours from your Bluetooth device to test out your paired connection!

PLAYING AUDIO VIA AUXILIARY

1. Connect one end of the 3.5 mm audio plug to the headphone jack on your audio device and connect the other to the jack on the bottom of your Sonosphear.
2. Turn on your audio device/smart phone and put it in play mode.
3. Turn on the Sonosphear by pressing and holding the Power button until the LED light is solid blue.
4. Use the Volume Button on the top of the Sonosphear to adjust the volume. You can also adjust the volume on your audio device, too.

PLAY/PAUSE/VOLUME

- Whether you're connected to the Sonosphear via Bluetooth or Auxiliary, you can manage the play/pause/volume functions on both the Sonosphear and your audio device.
- When connected and playing audio, simply press the Play/Pause button that's located on the top of the Sonosphear to pause. Press it once more to play.
- Next to the Play/Pause button are the Volume controls that allow you to adjust the volume directly on the Sonosphear. You can also manage this and the Play/Pause functions directly from your smart phone or other connected device.